 
 
 



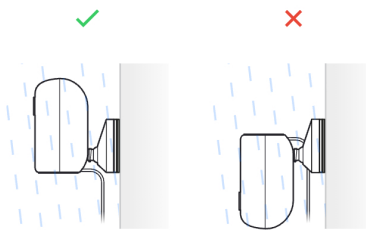




G4 Instant





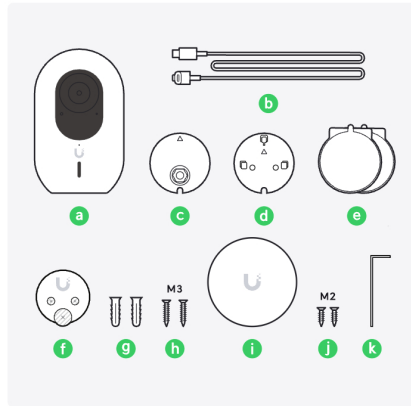


         1







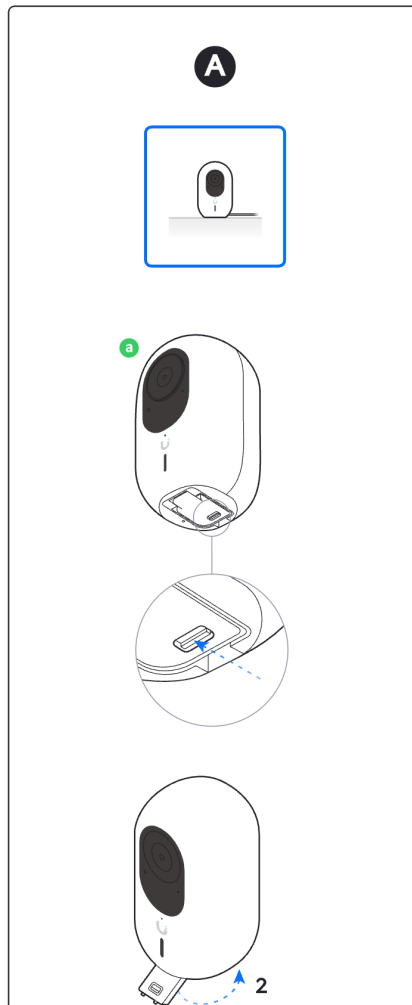


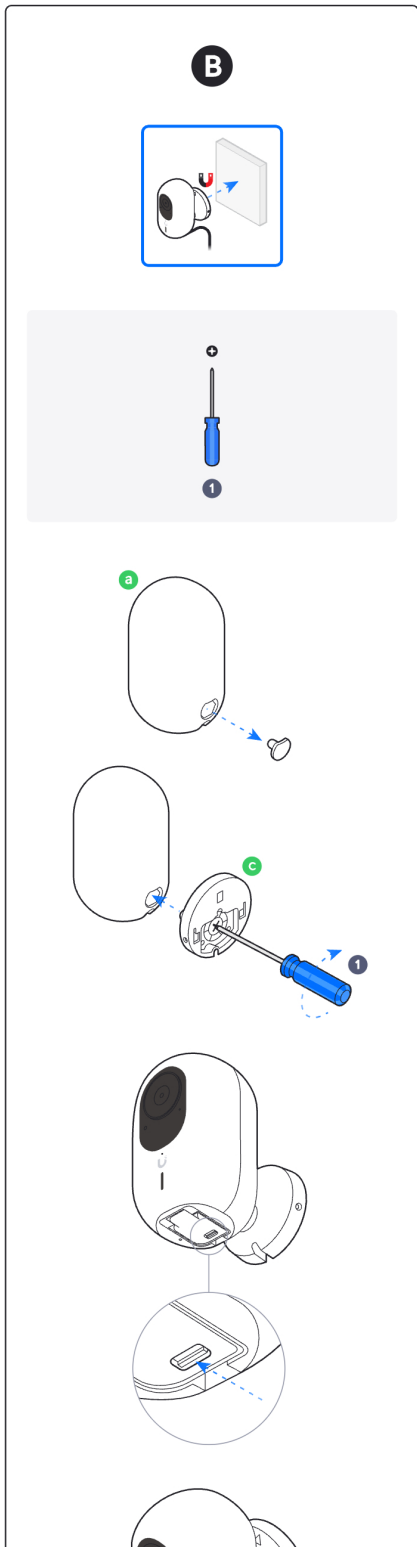
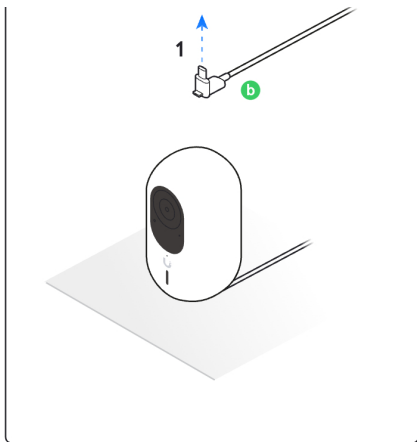






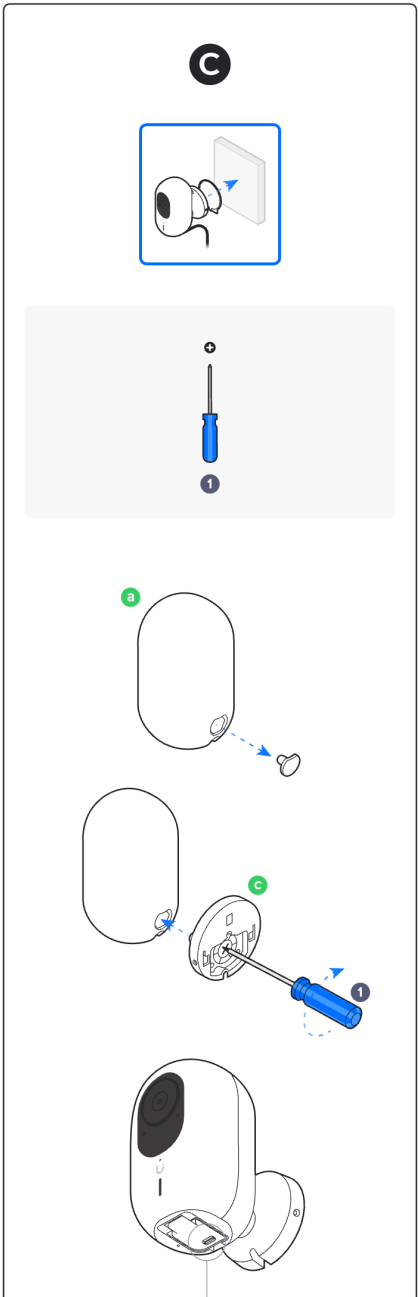
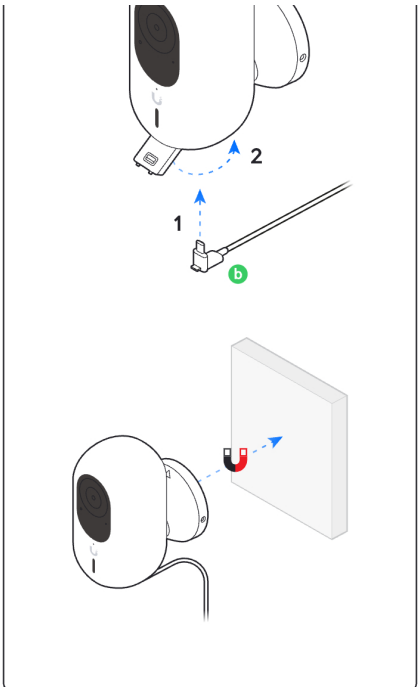


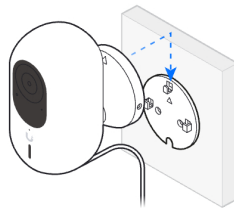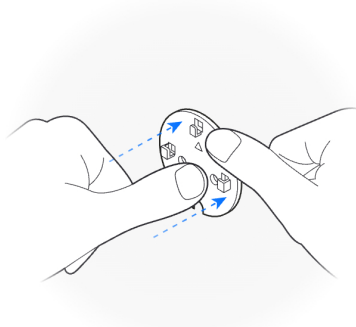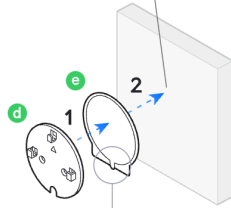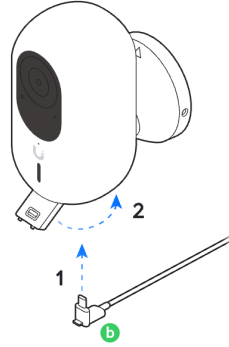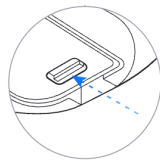


D

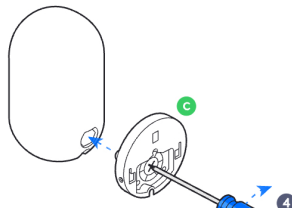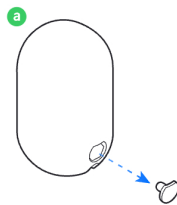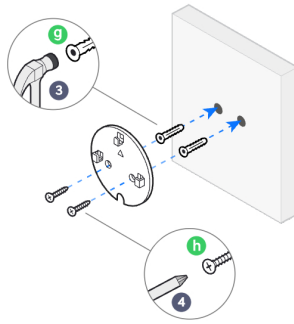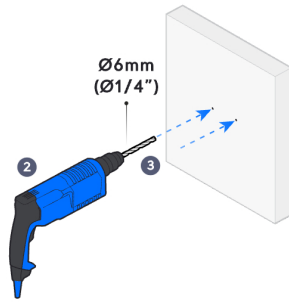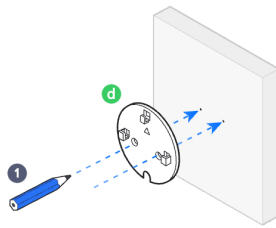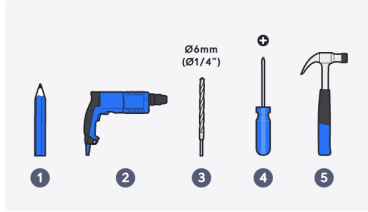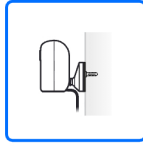       


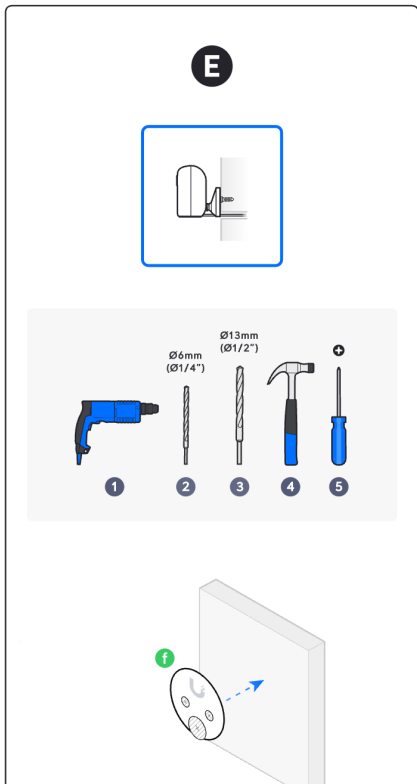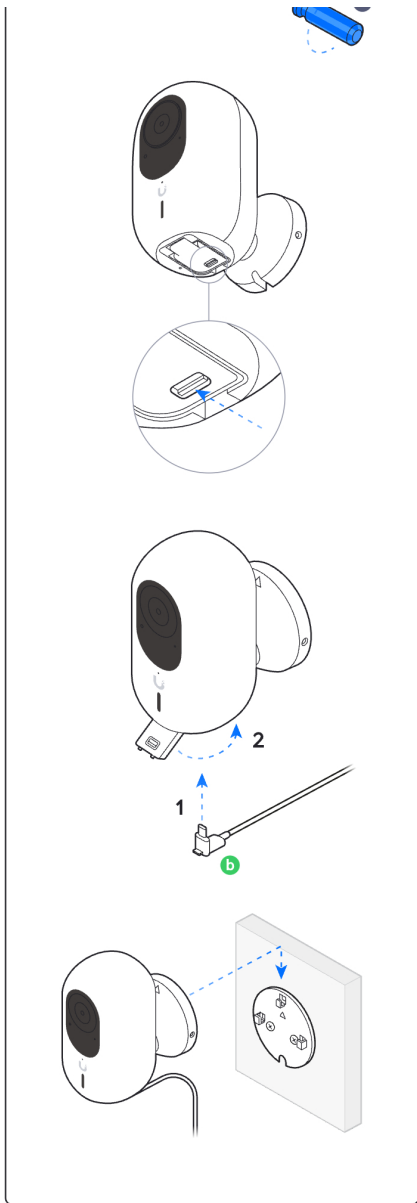  

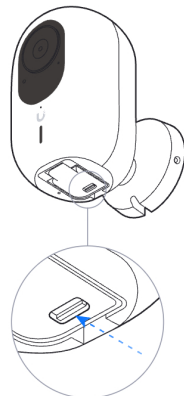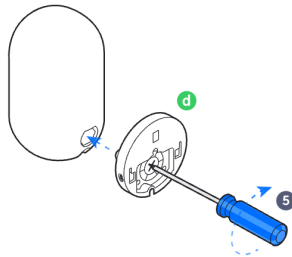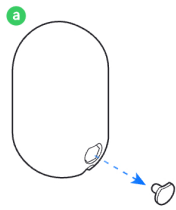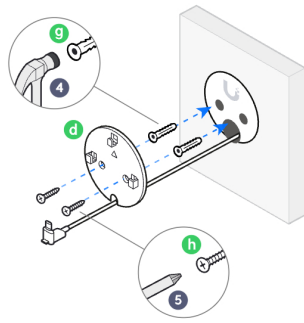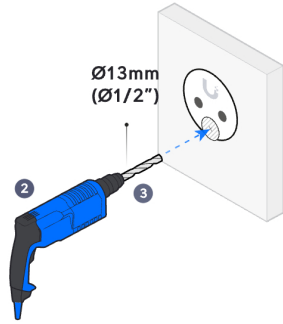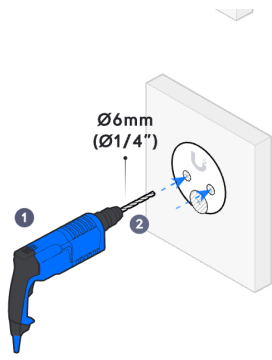      


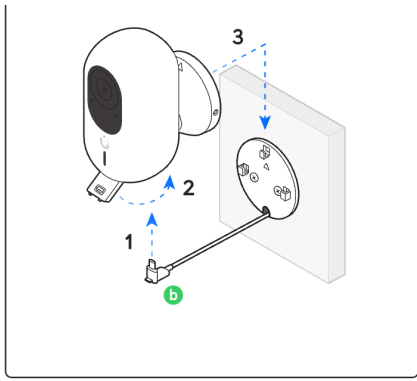 

2

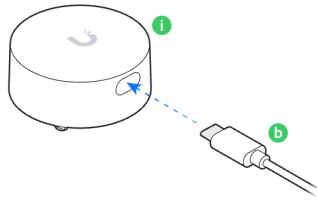 


3

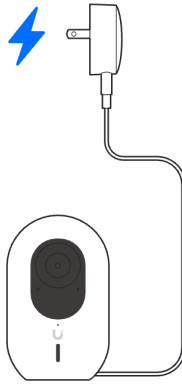 




4




 UniFi
Access Point



5

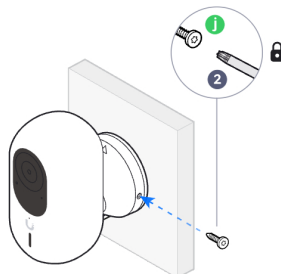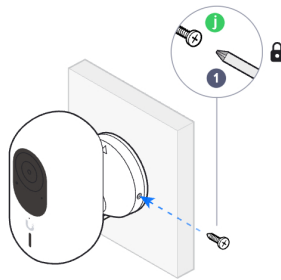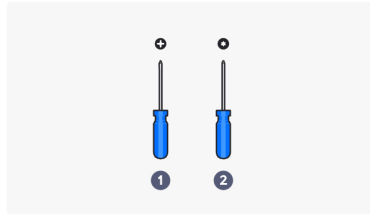   

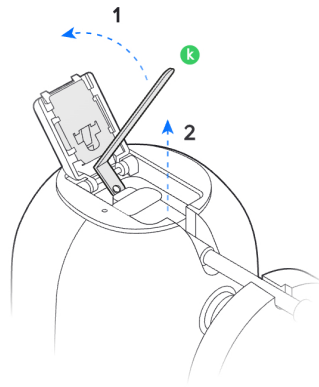 

If you need further assistance, visit our [Help Center](#) or contact [Ubiquiti Support](#).

© 2021 Ubiquiti Inc. All rights reserved. Ubiquiti, Ubiquiti Networks, the Ubiquiti logo, UAP, and UAP-AC are trademarks or registered trademarks of Ubiquiti Inc. in the United States and/or other countries. Apple Store and the Apple logo are trademarks of Apple Inc., registered in the US, and other countries. Google Play and the Google Play logo are trademarks of Google LLC. All other trademarks are the property of their respective owners.